



In-Line Telephone Amplifier

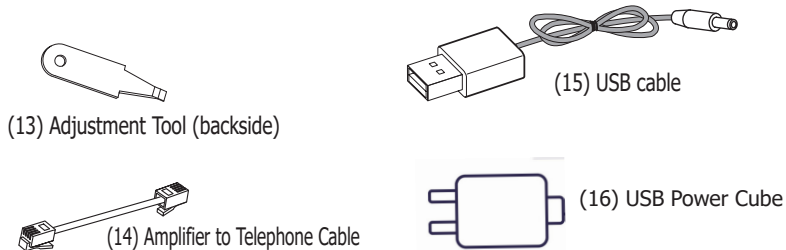

Part #XMT9A

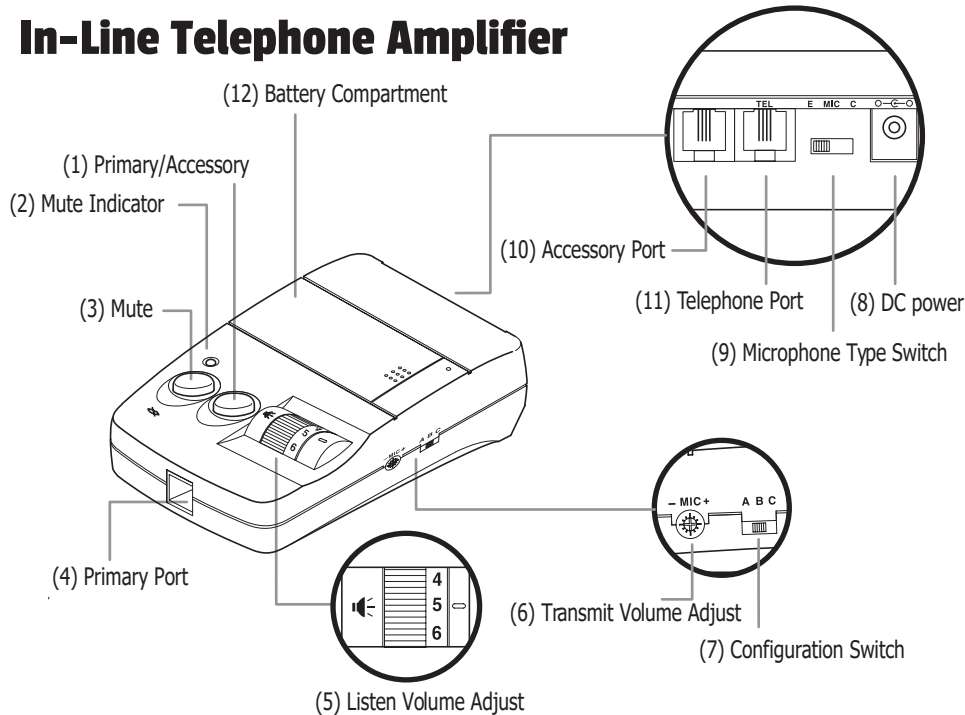

sandman.com
Helping you make *IT* work.

Sales & Support: (630) 980-7710

www.sandman.com • sales@sandman.com

Copyright ©2022 sandman.com, Inc. All Rights Reserved.

Product Diagram

- (1) **Primary/Accessory Button** : When this button is in the down position conversation is through the front Primary Port. When up, the accessory port is active.
- (2) **Mute Indicator** : Light indicates when the Mute feature is engaged.
- (3) **Mute Button** : When this button is depressed the Mute feature is active and your voice will not be heard at the other end of the call.
- (4) **Primary Port** : Plug the primary handset or headset to be amplified in this port.
- (5) **Listen Volume Adjust** : Increases or decreases the volume of the caller's voice. The number on the dial indicates the level of volume, 1 being the lowest and 10 the highest. We recommend that you set the volume to the lowest level possible for audible conversation to avoid acoustic injuries.
- (6) **Transmit Volume Adjust** : Increases or decreases the volume of your voice as heard by the caller.
- (7) **Configuration Switch** : Allows the amplifier to operate with different telephone types.
- (8) **DC Power** : 5V~6.3V 300mA AC adapter can be used instead of batteries. Or USB cable(15) can be used also.
- (9) **Microphone Switch** : Allows the amplifier to operate both Electret and Carbon microphone telephones. Most modern telephones use electret microphones so this switch should be set to the 'E' position. Older phones may use Carbon 'C'
- (10) **Accessory Port** : Optional pass through port to connect another alternate handset/headset.
- (11) **Telephone Port** : Connects to your telephone via the short cord provided.
- (12) **Battery Compartment** : Install two AA size alkaline batteries.
- (13) **Adjustment Tool** : Use to easily adjust transmit volume (6)
- (14) **Amplifier to Telephone Cable**
- (15) **USB cable**

Setup and Usage

- (1) **Power the Amplifier**
Install 2 AA Batteries (not included) in battery compartment (12) or connect the USB cable (15) to a USB port or to the USB Power Cube (16) provided.
- (2) **Connect Amplifier to Telephone**
Connect the Amplifier to Telephone using the provided cable (14) from the handset port on your Telephone to the Telephone Port (11) on Amplifier.
- (3) **Connect Handset / Headset to Primary Port on Amplifier**
Connect your Handset or Headset to the Primary Port (4) on the Amplifier. Check that the Primary/Accessory button (1) is pressed in.
- (4) **Set Configuration Switch**
Take your phone off-hook and adjust the Configuration Switch (7) until you hear dialtone. If you don't hear dialtone in any of the three positions, check cable connections or try switching Microphone Switch (9).
- (5) **Make a Test Call**
Call a friend or colleague and test operation and volume controls. If your friend can't hear you, try an alternate setting on Configuration Switch (7) or adjust Transmit Volume Adjustment (7) with Adjustment Tool (13).
- (6) **Adjust Amplification Volume**
Turn the Listen Volume Adjust Wheel (5) at any time to adjust amplification volume to a comfortable level. Mute & Volume functions effect Primary Port (4) only.
- (7) **Mute Button**
Use the Mute Button (3) at any time to mute transmission. Press again to un-mute. Mute Indicator Light (2) will light red when transmission is muted.